80g双胶纸
风琴折页

6974641045871　L1194　NS版卡片手柄复古灰

6974641045888　L1195 NS版卡片手柄复古紫

参数

尺寸：105*66*21MM
重量：80G
材质：ABS+ 胶
工作电压：5.7V
包装：手柄*1

说明书*1
TPE 数据线*1
使用电流：＜150UA@3.7V
工作电流：＜150MA@5.7V

支持平台

PC　NS　安卓 /iOS

注：部分系统功能存在差异

检查步骤

确认产品完整性
打开包装后产品后，我们需要检查产品是否完整，打开包装后，可以检查产品的外观是否有明显的损伤或者缺少任何组成部件，如发现缺失或损坏，请及时联系我们的客服部门进行处理。

检查电源和电池性
检查手柄的充电连接是否正常，确保充电线和充电设备的连接稳定。检查手柄的电池是否有电量，检查充电指示灯是否正常工作。

日常维护

关于充电
为了保证您从功能或 IO 保持充电，请勿长时间充电，充电超充电时间会对不一样，可能会导致手柄电池损坏。建议使用 5V/A 充电器给手柄充电。

保持清洁
建议您在平整的环境进行保存，确保产品内部的电子元器件不被潮湿的环境破坏掉。

电源和电线检查
检查电源电缆和电线是否完好无损，并且连接到充电、电池和插拉手专电状态台等充电连接。

外观检查
检查产品外表是否完好，没有明显的损伤或变形。

硬件检查
检查按键是否卡顿，是否有异响或按键是否正常。

确保使用环境安全
在使用产品时，我们需要确保使用环境是安全的，避免产品受到潮湿、高温或者其他恶劣条件的影响，以免造成损坏。我们还必须保持清洁的环境，并且确保产品的安全措施。

固定产品的部件
在使用产品之前，我们需要仔细检查产品的固件，说明书或者包装盒上的指示，以确保产品的正确安装和使用。通过仔细检查这些部件，我们可以更好地了解产品的特点和功能，并且可以避免一些不必要的错误操作。

安全要求
请使用相对应的充电进行充电安装，避免不要对产品进行改装或者拆卸，以免造成安全问题。在使用产品时，我们应该遵守安全规则和注意事项，确保使用产品的安全性。

日常维护

关于充电
为了保证您从功能或 IO 保持充电，请勿长时间充电，充电超充电时间会对不一样，可能会导致手柄电池损坏。建议使用 5V/A 充电器给手柄充电。

保持清洁
建议您在平整的环境进行保存，确保产品内部的电子元器件不被潮湿的环境破坏掉。

电源和电线检查
检查电源电缆和电线是否完好无损，并且连接到充电、电池和插拉手专电状态台等充电连接。

防尘措施
请在存储内部安装防尘平底后，请在用户生活前进行使，请认使用有效的且有防护措施，以减少灰尘产品内部的影响。

防护措施
对于易受损部分，如按钮和机电，建议使用保护套或保护膜，以减少日常使用中的损耗和维修。

定期检查安全性能
请定期检查产品的安全性能，确保设置保护正常运行。

软件和固件更新
定期检查产品的软件和固件更新，及时安装以获取最新的功能及产品优化。

安全注意事项
请勿在潮湿的环境中使用产品，避免将产品浸入水中或者其他液体中。

售后服务

服务电话： 0769-83189729
服务时间： 工作日9:30-18：00(请准备好购买订单号及产品)
售后及升级请搜索微信公众号：**侠客IINE**

L1194/L1195


操作指南 | Setup Guide



NS版本口袋手柄Pro


IINE Palm-Sized Retro Chronos Controller

产品图片仅供参考
Picture above for reference only

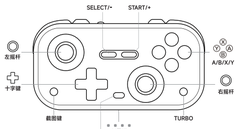

1

NS - 无线连接



打开switch设置页面




按下5秒



按下配对键3秒，LED灯快闪，配对成功后按玩家指示常亮


NS - 有线连接



打开switch设置页面



选择手柄与感应器选项，开启Pro手柄的有线连接



用手柄充电线连接底座与手柄

用双C线（自备）连接主机与手柄

2

PC - 无线连接



按下5秒

唤醒NS2方式：


① 在主界面中选择 「手柄」 →「更改握法/顺序」，进入手柄配对界面

② 长按手柄顶部的配对键，指示灯快闪松手，即可配对成功

③ 把原装左右手柄同时从NS2主机上拔下

④ 原装左右手柄重新插回NS2主机，即可实现NS2唤醒功能

（PS：只有首次连接需要配对，之后长按手柄Home键(原子形状)，即可唤醒/回连主机）



长按配对键2s




LED 指示灯快速闪烁进入配对
LED 指示灯常亮连接成功




原装手柄快速拔插一次

可以正常使用唤醒功能



打开电脑蓝牙连接界面，按下配对键1+Y3秒，
LED+2同时快闪后松手，配对成功后LED+2常亮

PC - 有线连接



用附带的Type-C数据线连接PC主机，
配对成功后LED+4常亮



XINPUT模式

DINPUT模式

按住[START]+[SELECT]+[X]3S，切换XINPUT/DINPUT模式

3

手机通用模式（DualShock4模拟模式）





按下5秒

先按[配对键]+[左3秒，LED+快闪，配对成功后LED+4常亮

4

安卓连接 - 无线连接




按下3秒

先按[配对键]+[X]3秒，LED+3常亮



iOS - 无线连接



按下3秒

打开手机蓝牙连接界面，按下[配对键]+[Y]3秒，
LED+2快闪，配对成功后LED+2常亮



注：安卓手机和模拟器游戏，建议采用DS配对方式连接

手柄休眠



手柄回连



按一下HOME键唤醒手柄，被唤醒后会自动回连最后连接的设备
（支持双模Switch主机）

手柄功能设置 - 连发/自动连发设置



连发速率调节

[Turbo]+[右摇杆]往右，加快连发速率
[Turbo]+[右摇杆]往左，减慢连发速率



一档
每秒连续连发5下

二档
每秒连续连发12下(默认)

三档
每秒连续连发20下

电量显示



按下[Turbo]+[START]2S查看当前手柄电量

电量指示灯



20%以下　20%-50%　51%-75%　76%-100%

手柄震动调节

[Turbo]+[右摇杆]往上，增强震动强度
[Turbo]+[右摇杆]往下，减弱震动强度



一档
0%

二档
50%

三档
100%

十字键四向八向切换

同时按住[SELECT]+方向键右边3秒，切换十字键四向/八向模式。
成功后震动提示。



ABXY布局互换

按下[SELECT]+[Turbo]2S切换ABXY按键布局,成功后震动提示



XBOX布局

任天堂布局

摇杆校准

手柄关机状态下，按[Home]+[截图键]进入校准模式，再按[A]键开始校准，成功后震动提示。
此时LED闪烁5下，摇杆最大圈转3次，完成后按[A]键退出，校准完成。

手柄充电指示



常规死区与0死区调节



按住[Turbo]+[L3]+[R3]3S，切换死区模式，
成功后震动提示

恢复出厂设置



按住[Turbo]+[SELECT]+[START]2S，恢复出厂设置，
成功后震动提示

手柄复位



轻戳复位孔进行手柄复位

十字键左摇杆互换

按下[START]+[左摇杆]2S十字键与左摇杆互换，成功后震动提示



虚拟触控模式



先按[配对键]+[X]3秒 LED+快闪，配对成功后LED+1常亮

在应用商店下载Keylinker，选择安卓直连模式，
进入虚拟触控模式（无记忆功能）

Features & Specifications

Size: 125*66*21mm
Weight: 84g
Material: ABS+Copper
Working Voltage: 3.7V
List: Controller*1

User Manual*1
Type-C Charging Cable*1
Quiescent Current: < 150uA/3.7V
Working Current: < 100mA/3.7V

Compatibility

PC NS Android&IOS

Note: Can only support native gamepad games on iOS App Store.

Check Steps

PACKAGE CHECKING
Before beginning the controller setup, carefully inspect the package to ensure that all the necessary components are present. If anything is missing or damaged, please contact the manufacturer or retailer for assistance.

CONTROLLER INSPECTION
Before proceeding with the setup, carefully inspect the controller and its accessories for any visible damage that may have occurred during shipping or handling.

READING THE PRODUCT MANUAL
To maximize your experience with the controller and ensure its proper use, it is highly recommended to thoroughly read the provided product manual before proceeding with setup and operation.

POWER SUPPLY AND CHARGING CABLE CHECKING
Before use, ensure the charging cable is free from damage, fraying, or exposed wires to guarantee optimal performance and prevent potential issues with the power supply.

TESTING
Before regular use, perform a quick functionality test to ensure all buttons, joysticks, and features are responsive and working correctly.

INSTALLATION
If the controller requires installation, follow the provided instructions in the user manual for proper setup. Ensure compatibility with your device.

ENVIRONMENT
Create a secure operating environment for the controller by selecting a well-ventilated and dry area, avoiding exposure to extreme temperatures or moisture, and keeping the controller away from liquids and flammable materials

Routine Maintenance

ABOUT CHARGING
Please use only the 5V1A charger to prevent damage to the controller circuit, and avoid high-power or PD fast charging chargers due to different charging protocols.

DUST PREVENTION
To prevent joystick drifting caused by dust, use a storage bag or other protective measures to minimize dust impact on the inside of the game controller.

FIRMWARE UPDATE
Please visit the official firmware updates on the manufacturer's website. If updates are available, follow the instructions provided to update the controller's firmware.

VENTILATION RECOMMENDATION
Store the controller in a dry environment to safeguard electronic components from potential damage due to humidity.

PROTECTIVE MEASURES
To safeguard vulnerable parts like joystick and joypad, use protective covers or films to minimize scratches and collisions during daily use.


AVOID OVERUSE
Prevent overuse to extend battery life. Turn off the equipment when not in use.

POWER SUPPLY AND CABLE INSPECTION
Regularly inspect the power cord and plug for integrity. Charge the controller periodically, as prolonged battery depletion can lead to battery damage.

SAFETY PERFORMANCE CHECK
Regularly examine the mechanical function of the product to ensure the proper operation of the device and other hardware.

L1194/L1195


Setup Guide



IINE Palm-Sized Retro Chronos Controller for NS


Pictures above for reference only



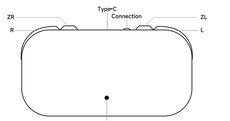

1

NS - Wireless Connection



Open the Switch settings page


: 03 Press for 3 seconds




Press and hold the [Pairing] for 3 seconds, LED will flash. After successful pairing, the LED light will stay lit.




NS - Wired Connection

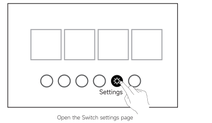

Open the Switch settings page

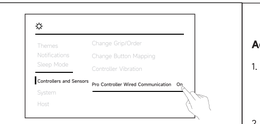

Select [Controllers and Sensors], and turn on the [Pro Controller Wired Communication].



Use the charging cable to connect the dock and the controller.

Use a self-prepared Type-C to Type-C cable to connect the console and the controller.

2

PC - Wireless Connection




: 02 Press for 3 seconds

Activate Wake-Up Function for NS2

1. Open the controller connection page on NS2.



2. Press and hold the Pairing Button to connect to NS2 normally.



3. Controller connected successfully (if Wake-Up function is not needed, stop here).



4. Quickly remove the JOYCON on NS2 and reinsert it.




5. Wake-Up function activated for this NS2 — only needs to be done once. For a different NS2 console, repeat the process.



Press and hold the [Pairing] Button for 3 seconds from the bluetooth settings on PC, LED1,LED2 will flash. After successful pairing, LED1+2 will stay lit.

PC - Wired Connection



Connect the PC to the controller using the included Type-C cable. After successful pairing, LED1+4 will stay lit.



Xinput Mode Dinput Mode


Press and hold [START]+[SELECT]+[X] buttons for 3 seconds to switch the mode.

3

DualShock 4 Emulation Mode(For mobile phones only)



: 03 Press for 3 seconds




Press and hold [Pairing]+[B] buttons for 3 seconds, LED3 and LED4 will flash rapidly. After successful pairing, the LED3 and LED4 will stay lit.


4

Android - Wireless Connection

: 03 Press for 3 seconds




Press and hold [Pairing]+[A] Buttons for 3 seconds, LED2 and LED3 will flash rapidly. After successful pairing, the LED1, LED3 will stay lit.



iOS - Wireless Connection

: 03 Press for 3 seconds



Press and hold the [Pairing]+[Y] Button for 3 seconds from the bluetooth settings on the phone, LED1,LED2 will flash. After successful pairing, the LED1, LED2 will stay lit.



Note: For playing emulator games on Android, it is recommended to use the iOS pairing method for connection.

Controller Sleep Mode

: 01



The controller will enter sleep mode after 5 minutes of inactivity.

In wireless mode, long press the [Pairing] button for 1 seconds to disconnect and enter sleep mode.

Controller Reconnect

: 01



Press the [HOME] button to wake up the controller. After waking up, it will automatically reconnect to the last connected device (support waking up the Switch).

Controller Function Settings - Turbo Function Settings

Manual Turbo Mode
Press the [Turbo] and any action buttons to activate manual turbo.

Auto Turbo Mode
Repeat the operation for the second time to switch manual turbo mode to auto turbo mode.

Clean Turbo Function
Repeat the operation for the third time or hold the [Turbo] button for 5 seconds to clean the turbo function.



Turbo Rate Settings

Increase: Hold the [Turbo] and push the [Right Joystick] to the right.
Decrease: Hold the [Turbo] and push the [Right Joystick] to the left.



Level 1 5/s
Level 2 12/s (default)
Level 3 20/s

Battery Power Display

: 02



Press and hold [Turbo]+[START] buttons for 2 seconds to check the current battery level.

Battery Indicator Light

Below 25% 26%~50% 51%~75% 76%~100%

Rumble Adjustment

Increase: Hold the [Turbo] button and push the [Right Joystick] up.
Decrease: Hold the [Turbo] button and push the [Right Joystick] down.



Level 1 0%
Level 2 50%
Level 3 100%

D-Pad 4-Way/8-Way Switch Settings

Hold the [Select] button and press right on the [Dpad] for 2 seconds to switch. The controller will rumble to confirm success.



ABXY Layout Switch

Hold the [Select] and [Turbo] buttons for 2 seconds to switch. The controller will rumble to confirm success.



Joystick Calibration

In power-off state, press [Home]+[Screenshot] Buttons to enter calibration mode (LED1 flashes slowly). Then press [A] button to start calibration, LED2 will flash slowly. Rotate the joystick to its maximum circle 3 times. After completion, press [A] button to exit and finish the calibration.

Controller Charging Indicators

SLEEP MODE


Charging Status LED1+LED4 flash slowly

Full Charge Status LED1+LED4 stay lit.

Connection Mode

Charging Status The platform-specific LED will flash.

Full Charge Status The platform-specific LED will stay lit.



Dead Zone Adjustment



Default: Dead Zone at the center.
Switch to Zero Dead Zone: Hold [Turbo]+[LS+RS] buttons for 3 seconds, the controller will rumble confirms success (no memory function).

D-Pad and Left Joystick Swap

Hold the [Start] button and press the [Left Joystick] down for 2 seconds to swap. The controller will rumble to confirm success.

: 02



Android Touch Mode




Press and hold [Pairing]+[X] buttons for 3 seconds, LED1+4 will flash rapidly. After successful pairing, the LED1+4 lights will stay lit.



Download Keylinker app from the app store, select Android Direct Mode, and enter Touch Mode(no memory function).

Restore to Factory Settings


: 02

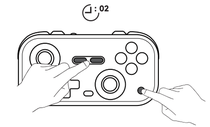

Press and hold the [Turbo]+[SELECT+[START] buttons for 2 seconds to restore factory settings. The controller will rumble to confirm success.

Controller Reset

: 01



Use a pin to gently press the reset hole on the back of the controller to reset it.